


43AP Pneumatic Indicating Controller Calibration and Replacement of Pressure Element


Air Supply and Output Piping

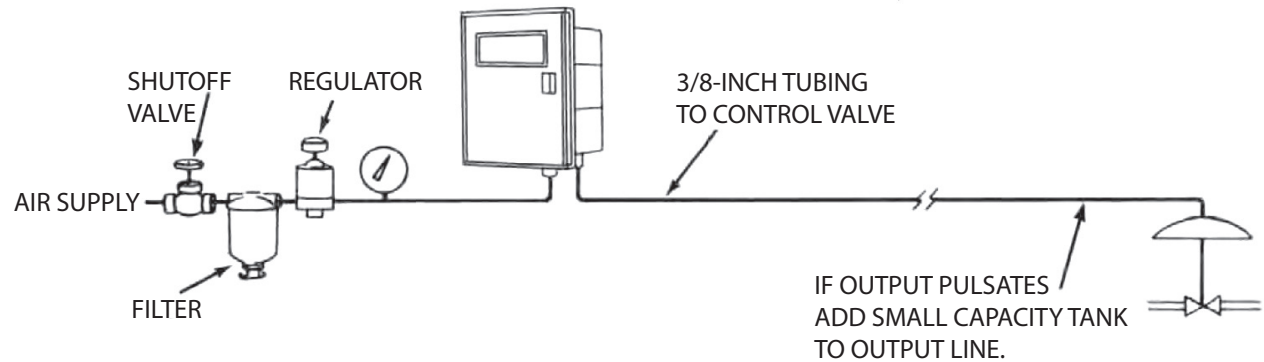


1. Air supply must be regulated at 20 psi (140 kPa).
2. Controller uses about 0.3 std ft³/min (0.5 std m³/h) of air in normal operation.
3. Air must be clean and dry. Blow out filter regularly.
4. Air lines must be free of leaks.

Squaring Up of Linkage for Complete Calibration

If parts have been replaced, or for some other reason a complete recalibration is necessary, square up the linkage before the actual calibration.

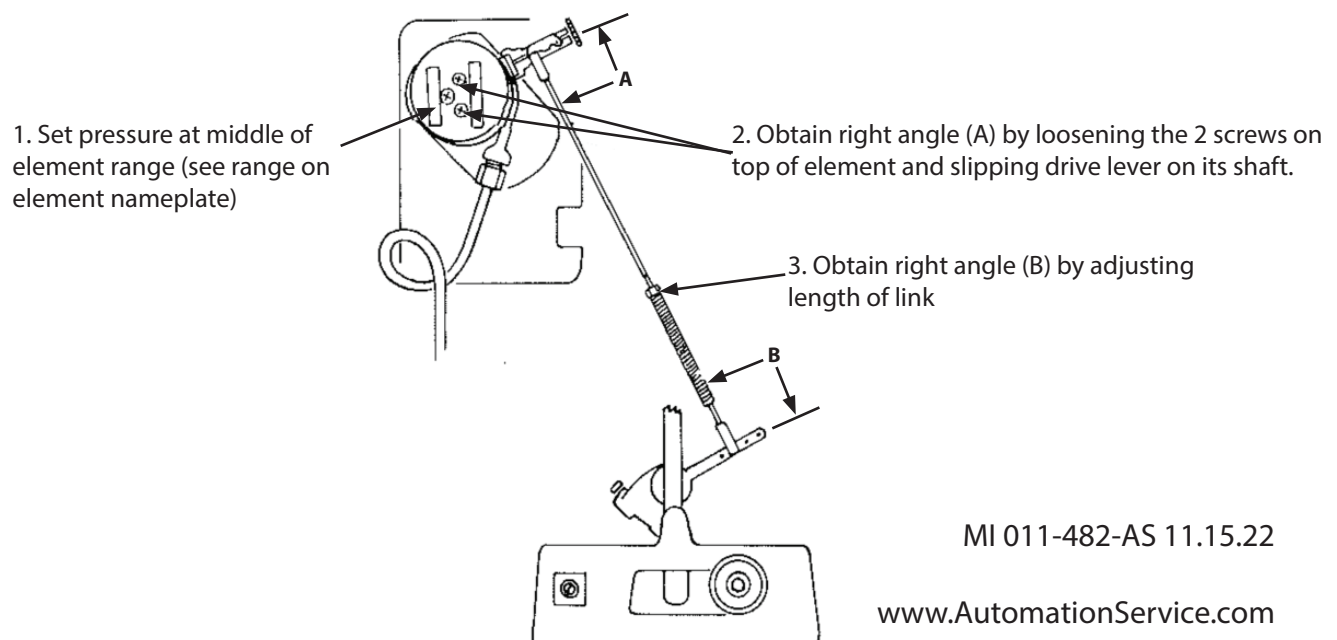

Calibration Procedure

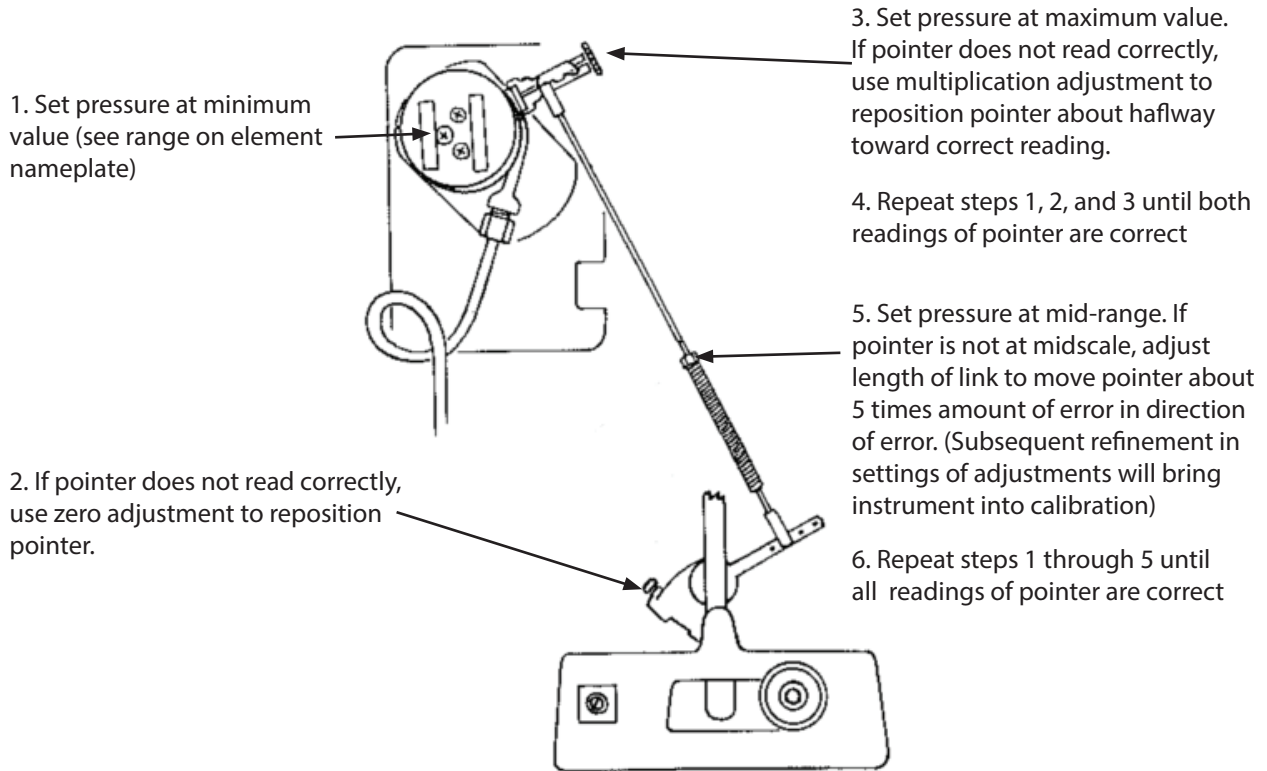

To Replace Measuring Element

